

INTRODUCTION

Technological advancements such as the ability to freeze semen has led to advantages in artificial insemination (AI) including the indefinite storage of sperm with easier transport, greater choice of sires, and elite genetic merit (Moore, Halser, 2017). Frozen semen is often mishandled post thaw prior to the animal being inseminated which leads to damaged sperm (Nur, Ileri, Ak, 2006). This is commonly known as cold shock. Cold shock is a byproduct of mishandling. Cold shock occurs when too much time is taken to get the frozen semen straw from the tank and to the thaw bath or from the thaw bath to the insemination gun. Cold shock is the permanent damage to sperm due to a decrease in post thaw temperature of the semen (Nur, Ileri, Ak, 2006). Straws suffering from cold shock is a crucial reason for a loss of viability and motility in the sperm (Blackshaw, A. W.,1957). With the introduction of frozen semen, the evaluation of post thaw survival became important (Foote, 2010). This leads to an improvement of 15% in fertility coming from a better method that initially protects semen from cold shock (Foote, 2010). A faster thawing process can prevent cold shock; which would eventually become a permanent injury resulting in lower conception rates (Walton,et al,1957). Cold shock affecting spermatozoa was first discovered in the U.S.S.R. when artificial insemination was being developed in cold climates (Walton,et al,1957). The objective of the study is to determine if cold shocked bovine spermatozoa decreases viability and motility of sperm post thaw.

METHODS

Straw retrieval

One way of storing semen straws is in liquid nitrogen tanks at -320F to keep the semen from thawing or dying (Webb, 1992). First the straws will have to be removed from the Worthington AI24 semen tank which is stored with liquid nitrogen and ½ milliliter conventional cattle semen straws. Open the tank and pull the canister handle up to the bottom of the neck . Take the plastic straw tweezers, pick a goblet and pull back the white cane tab pulling out a straw. Pick the straw straight up until it reaches the desired temperature and hold it for the amount of time needed. Then, flick the straw and place it in the Walther 2L Laboratory water bath to thaw (ABS, 2011). Repeat this process in the following tables according to time and temperature (tables and figures) presented.

Thawing

The semen straws need to be thawed at 98 degrees Fahrenheit (ABS, 2011). When transferring the straws from the tank to the thaw water, the thawing of frozen semen should be at maximum speed (Diskin, 2018). If kept exposed to air it will damage the sperm causing additional issues to the viability. After placing the straw in the thaw water, take the canister handle back down and close the tank so the temperature can be preserved. During the thawing time, take a paper towel and blow on it to keep it warm (ABS, 2011). Next, place a clean slide and coverslip on the slide warmer. After the semen is thawed, take it out of the thaw bath and dry the straw with the warm paper towel (Diskin, 2018). Cut the tip of the straw and place semen in a small holding tube. Use a dropper to place a drop of semen on the slide.


Assessing viability and motility of sperm

More accurate results can come from a well prepared slide on a warm stage using a good microscope (Foote, 1982). Therefore once each slide has semen on it and is covered by a coverslip, place it on the C&A Scientific Step-Up Slide Warmer 23 Slides 110 Volt: Medical Device until it is ready to be viewed under the microscope. This will help to keep the sperm on the slides at 98 degrees Fahrenheit and ensure that minimal damage to the sperm. Place the specimen on the i4 12xDC Semen Evaluation Microscope, which is used for the viewing of live specimens and assess the viability and motility based on the movement and the amount of the live sperm. View the motility and viability of the semen through the mounted BioVID HD Camera for i4 Microscope w/ 11.6" 1080p color LCD screen for live presentation of the slide. It is said that sperm must be alive in order to be fertile and must be moving in order to be motile (Foote, 1982). Grade the motility based on how the sperm is moving using the motility rating. Classify the sperm movement as either P (Progressively motile), PS (Progressively motile slow) or NM (Nonmotile or dead). The normal recommendation is that bulls have greater than 30% of progressively motile sperm (Rouge, 2003). Record the data after each sequence.

Effects of Viability and Motility on Cold Shocked Bovine Spermatozoa Held at Different Temperatures

K.A. Rosario, * B.K. Shelnutt, * M.M.K Scott, * and B.M. Terry *²

Three methods were tested (n=90) and post-thaw motility was evaluated and classified as P (Progressively motile), PS (Progressively motile slow) or NM (Non Motile or dead) Method 1 (n=30) resulted in 80 % progressively motile or progressively motile slow and 20 % non motile (Figure 1). Semen held in the middle of the tank resulted in higher motility (87%) than below the neck of the tank (80%) or top of the liquid nitrogen tank (57%) (Figure 1). Method 2 (n=30) resulted in 87% progressively motile or progressively motile slow and 13% non motile (Figure 1). Method 3 (n=30) resulted in 57% progressively motile or progressively motile slow and 43% non motile (Figure 1). The middle of the tank resulted in a higher motility compared to the other methods which could be due to decreased retrieval time when compared to samples from below the neck of the tank. The top of the neck is much warmer (+36 F to +54 F) than the tank and the middle of the neck (-108 F to -116 F), so when you pull them up the semen thaws too quickly. Overall, Method 1 and Method 2 yielded the highest percent of progressively motile semen (Figure 1), but all methods exceeded normal recommendations of greater than 30% of progressively motile sperm (Rouge, 2003).

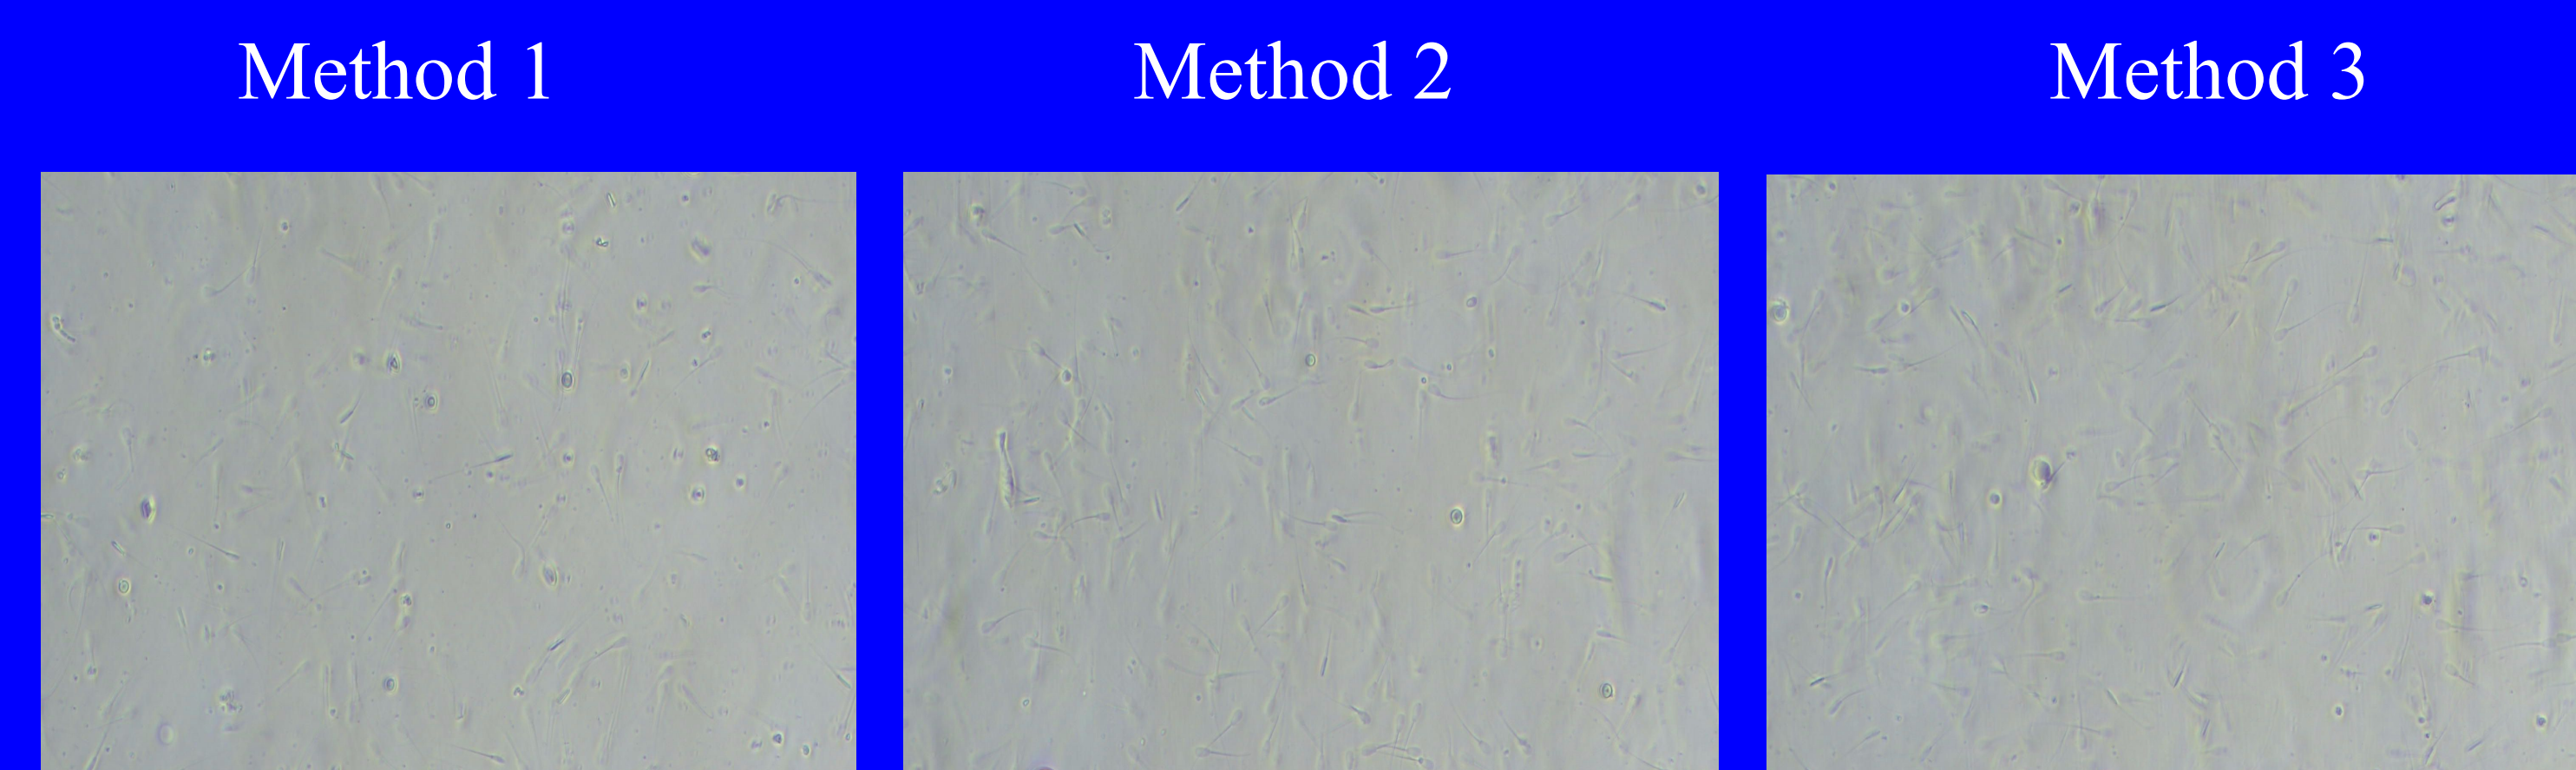

RESULTS

Figure 1: Experimental Design		
Method	Thaw Procedure	Motility (n=90)
Below neck of the tank (-320F)	Thaw 98F for 40 sec	(n=30) 80%(*P,PS) 20%(*NM)
Middle of neck in tank (-108F to -116F)	Thaw 98F for 40 sec	(n=30) 87%(P,PS) 13%(NM)
Top of neck in tank (+36F to + 54F)	Thaw 98F for 40 sec	(n=30) 57%(P,PS) 43% (NM)

*P = progressively motile; PS = progressively motile slow; NM = non motile

DISCUSSION

Cold shock in semen causes the semen to be damaged affecting the motility and viability post thaw (Nur, Ileri, Ak, 2006). Semen does best when thawed at a temperature of 98 F for 5, 10, or 15 seconds (Figure 1). The highest motility scores were seen at 5, 10, and 15 seconds when samples were held at the base of the tank compared to all samples collected (n=90) (Figure 1). Thus, the faster the straw retrieval process the less susceptible the semen from the straw is to cold shock (Walton,et al,1957). External factors could influence results such as variability of sample processing time, which is subject to human error, and variability in the temperature of the liquid nitrogen tank after each sample was collected. Given in the study the tank was closed after each straw retrieval in order to help ensure that the temperature would remain the same, but this is unknown due to lack of temperature measurements collected in this study. Faster thawing times from the liquid nitrogen tank to the thaw bath resulted in improved motility in sperm (Figure 1). Based on the results from this study, cold shock does affect the viability and motility of bovine semen post thaw (Figure 1)). Further research is needed to determine the extent of the effects of cold shock on bovine semen post thaw.

LITERATURE CITED

1. ABS Global. 2011. A.I. Management Manual. 6th ed. Vol 1. ABS Global. DeForest, WI.
2. Blackshaw, A. W., and G. W. Salisbury. "Factors influencing metabolic activity of bull spermatozoa. II. Cold-shock and its prevention." *Journal of Dairy Science* 40.9 (1957): 1099-1106.
3. Diskin, M. G. "Semen handling, time of insemination and insemination technique in cattle." *animal* 12.s1 (2018): s75-s84.
4. Foote, Robert H. "Cryopreservation of spermatozoa and artificial insemination: past, present, and future." *Journal of Andrology* 3.2 (1982): 85-100.
5. Foote, R. H. "The history of artificial insemination: Selected notes and notables." *J. Anim. Sci* 80 (2010): 1-10.
6. Moore, S.G. and J.F. Hasler. 2017."A 100-Year Review: Reproductive technologies in dairy science:" *Journal of Dairy Science*, Volume 100, Issue 12, 10314 - 10331
7. Nur, Zekariya, IRFAN KAMURAN Ileri, and Kemal Ak. "Effects of different temperature treatments applied to deep stored bull semen on post-thaw cold shocked spermatozoa." *BULLETIN-VETERINARY INSTITUTE IN PULAWY* 50.1 (2006): 79.
8. Rouge, Melissa. "Sperm Motility." *Pathophysiology of the Reproductive System*, Colorado State University, 20 Jan. 2003, www.vivo.colostate.edu/hbooks/pathophys/reprod/semeneval/motility.html.
9. Walton, et al. "Discussion - Cold Shock of Spermatozoa." *Proceedings of the Royal Society of London. Series B - Biological Sciences*, 17 Dec. 1957, royalsocietypublishing.org/doi/10.1098/rspb.1957.0069.
10. Webb, Daniel Warren. *Artificial insemination in dairy cattle*. University of Florida Cooperative Extension Service, Institute of Food and Agriculture Sciences, EDIS, 1992.